



ASSEMBLY OF THE SKIMMER - SUPPLEMENTAL INSTRUCTIONS


1. Place the square sealing gasket (7) against the small opening of the adapter (10), then insert four pan Quadrex screws (11) into the oblong holes on the inside of the wide opening.

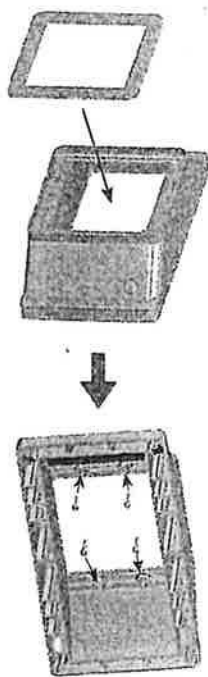


2. Ensure that the screws pass correctly through the gasket.

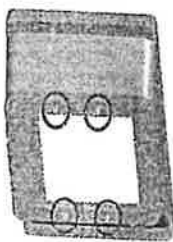

3. Attach the adapter (10) and gasket to the skimmer body (4), using the aforementioned screws. Make sure to respect the top/bottom orientation by following the top/bottom inscriptions on the back of the adapter.

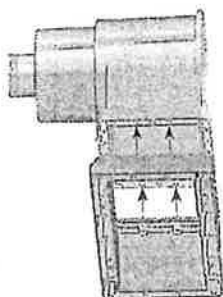


4. Screw four more pan Quadrex screws (11) into the remaining oblong holes deep inside the front of the adapter (two at the top and two at the bottom). The adapter is then held in place by a total of eight screws.

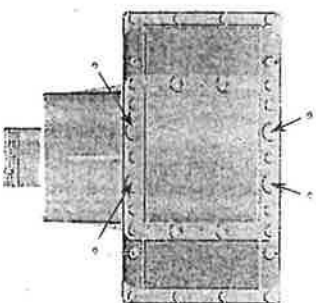


ASSEMBLAGE DE L'ÉCUMOIRE - INSTRUCTIONS SUPPLÉMENTAIRES


1. Appliquez le joint étanche carré (7) contre la petite ouverture de l'adaptateur (10), puis insérez quatre vis à tête bombée Quadrex (11) dans les trous oblongs situés au fond de la grande ouverture.

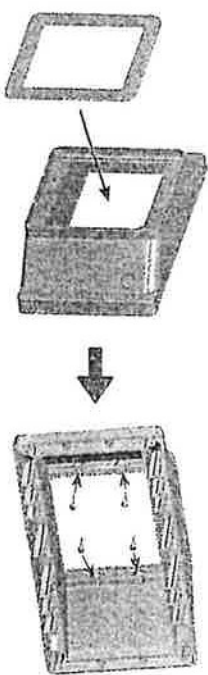

2. Assurez-vous que les vis traversent correctement le joint.

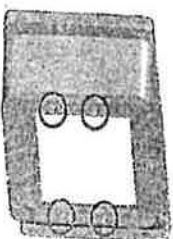

3. Fixer l'adaptateur (10) et le joint au corps de l'écumoire (4), en utilisant les vis mentionnées ci-dessus, assurez-vous de respecter l'orientation haut/bas en suivant les inscriptions top/bottom sur l'adaptateur.

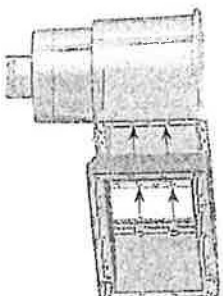

4. Vissez quatre autres vis à tête bombée Quadrex (11) dans les trous oblongs restants, situés en profondeur à l'avant de l'adaptateur (deux en haut et deux en bas). L'adaptateur est ainsi maintenu en place par un total de huit vis.

